



## Rookie Battery Operated Pitching Machine Maintenance

Yearly	Monthly	Daily
Replace throwing pads if required Have battery and charger tested. Replace as needed  Be sure the battery is fully charged before putting away for the season.  Check speed control knob for proper tension and operation.  Check Speed Control Box for Physical Damage Replace as needed.	Clean throwing pads by lightly sanding with # 60 sandpaper.  Spray lubricant on threads of elevation handle. (WD-40 or similar)  Check speed control box for physical damage. Replace as required.	Recharge battery after every use  Check balls & throwing pads Remove any bad balls from use  Check power cord for damage  Check elevation and pivot controls proper operation.

## Rookie Battery Operated Pitching Machine Trouble Shooting Guide

PROBLEM	POSSIBLE SOLUTION	NEXT	NEXT	NEXT	NEXT
<b>Machine will not run</b>	Check circuit breaker by pushing in to reset it. Connections	Check fuse and connections inside battery case Open Speed Control box and check wire connections	Recharge battery	Have battery and charger tested Replace if bad	Replace speed control Replace Motor
<b>Circuit breaker trips</b>	See if discs turns freely by hand	Replace circuit Breaker	Replace Speed Control	Replace Motor	
<b>Pitches inconsistent</b>	Wait 8 seconds between pitches Do not use wet balls Make sure balls are consistant wear, brand and type.	Recharge Battery	Clean throwing pads with #60 sandpaper	Replace Speed Control Replace Balls Replace Trowing Pads	Check that aluminum Discs are true - not bent